

DAYENS

Ampino

Stereo Power Amplifier

User's manual



Thank you for purchasing the Ampino stereo power amplifier.
We hope that you will enjoy it for many years.
For any questions or comments, or if we can assist you or support you in any way, please don't hesitate to contact us.

Please read the following instructions before using this product.

Unpacking

Shipping boxes have been designed to protect their contents and special care has been taken to prevent damage under normal shipping conditions. Mishandling should be evident upon inspection of the carton shipping box. If damage is found after visual inspection, document the damage with photographs and contact the transport carrier and Dayens immediately.

Placement

Ampino is designed for use inside homes.
It must be protected from the temperature extremes.
Avoid placing the unit in extremely hot locations such as near radiators or other heating units or in a place subject to excessive dust, mechanical shock and direct sunlight.
Device should not be placed on surface that may block the top or bottom ventilation openings. Never block ventilation openings on top of the device.
Make sure that device has normal air flow for cooling purposes.
Device is attended to work in horizontal position only.
Do not place heavy objects on the component.
Its location among the user's audio components is not critical.

Installation and Setup

Connect speaker cables to rear speaker terminals; there is one pair per channel.
You can use terminated (bananas, spades) and un-terminated cables (bare wire).
Please make sure that cables aren't shorted at speakers end. Speaker cables should be hand tightened down at the speaker output terminals, without excessive force.
Ampino is attended to work with most loudspeakers with impedance between 4 and 16 Ohm. We recommend single amp – single wire connection.
For preamplifier or source (with volume control) connection you can use any RCA (unbalanced) interconnect cables, recommended length is between 0,5 and 1m.
The choice of a high quality interconnect and speaker cables is recommended for best sonic result.
White input connector is for left channel, and red is for right channel cable.
For maximum safety we suggest that the power cord should be the last cable installed on your integrated amplifier.

Operation and Powering up

Your new Ampino is ready for operation after all the cables have been installed. The Ampino is provided with functional and simple front panel control with very logical and intuitive layout.

Ampino stereo power amplifier should be the last powered on device and also the first to be powered of.

DO NOT unplug interconnect or loudspeaker cables while the power remains ON.

Never remove/insert AC line cord when the unit is ON.

Unplug the power cord of this product from the wall outlet during lightening storms or if you are not going to use it for a long period of time.

Front Panel Features

Power switch: Two position toggle switch.

Upper position: ON.

Lower position: OFF.

Down center green LED: Indicates that the device is powered ON.

Rear Panel Features

Speaker terminals: for connection of your speaker cables.

Input terminals: for connecting your interconnect cables.

IEC Power connector: for connecting power cord.

Warranty and Service

We are carefully manufacturing and testing our products with goal to keep the failure rate to a minimum; however, it is possible that something may go wrong.

If you have any problems with your product, contact us directly at service@dayens.rs and describe your problem in detail.

Warranty covers normal function of the product and starts from the date of purchase.

Our warranty does not apply:

- to damage caused during transport or by accident, abuse, misuse, misapplication, etc.
- to damage caused by service performed by unauthorized person;
- to a product or a part that has been modified in any way without our permission;

Customer will bear the expense of shipping the product to our service, including the return shipment, and all taxes, duties, and other customs fees.

After expiry of the warranty period we will provide replacement parts and service.

All repairs performed by Dayens after expiry of the warranty period will be charged to the owner and the cost will include only serviced/replaced parts and components and will carry a 180-day warranty on parts and labor.

No User Serviceable Components Inside.

Specifications

This section describes the basic specifications of the Ampino at the time of writing this manual.

Technical specifications

| | |
|----------------------------|------------------------------|
| Power (Watt): | 2x35 / 8 Ohm 2x50 / 4 Ohm |
| Number of inputs (stereo): | 1 |
| Input type: | RCA (unbalanced) |
| Frequency response (Hz): | 1Hz - 200kHz |
| SNR (dB): | >92 |
| Dimensions (mm): | 150x315x90 |
| Weight (kg): | 4 |

Specifications are subject to change without prior notice or obligation.

Proudly Designed, Engineered and Manufactured in Serbia



www.dayens.rs

office@dayens.rs

tel: +381 15 345 369

address: Centar 1, 15000 Šabac, Serbia